

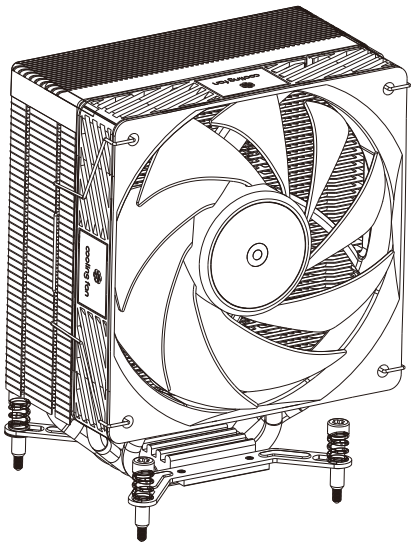
 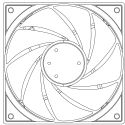
 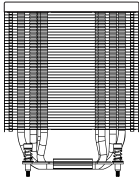

 
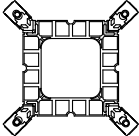


INSTALLATION MANUAL



|                                                                                              |                                                                                              |                                                                                              |                                                                                              |
|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| <p>A</p>   | <p>B</p>   | <p>C</p>   | <p>D</p>   |
| <p>E</p>  | <p>F</p>  | <p>G</p>  | <p>H</p>  |

## INTEL LGA115X/1200/1700/18XX/1366/1356

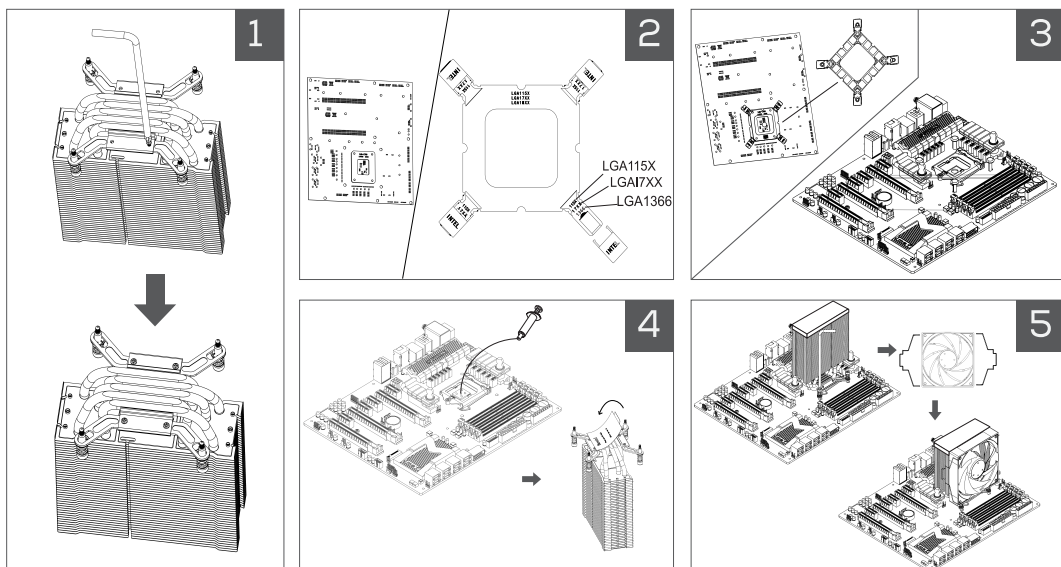

## AMD FM2/FM3/AM3/AM4/AM5

