
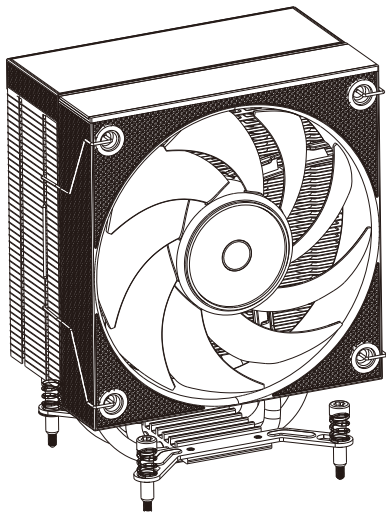
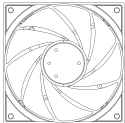
 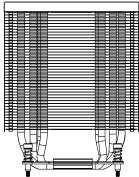
 
 

 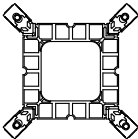


INSTALLATION MANUAL




**DOWNLOAD AND INSTALL
THE TEMPERATURE DISPLAY
SOFTWARE BEFORE USING**

DOWNLOAD LINK:
valuetop.com.bd/download

A 	B 	C 	D 
E 	F 	G 	H 

INTEL LGA115X/1200/1700/18XX/1366/1356

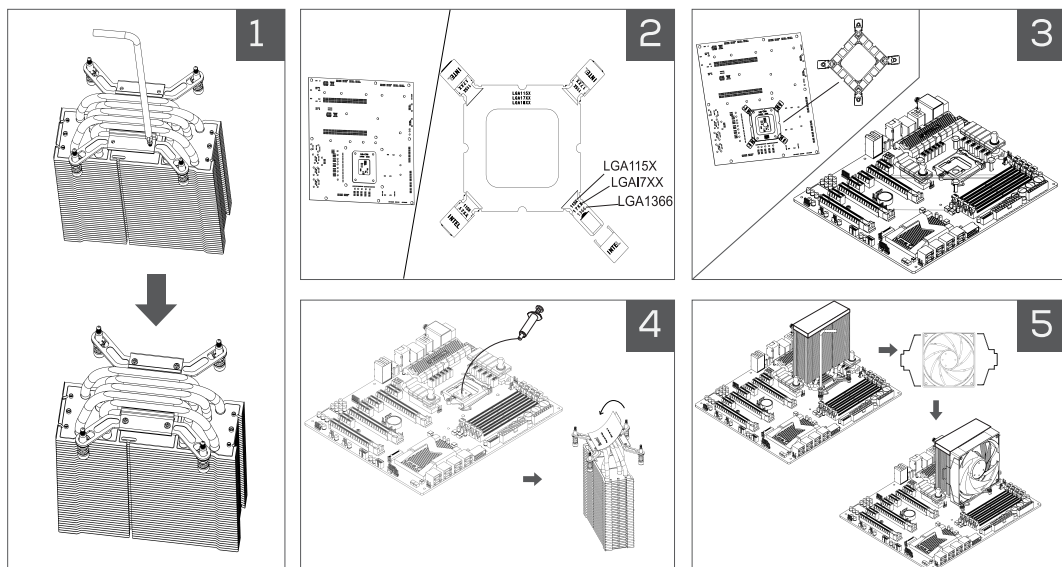

AMD FM2/FM3/AM3/AM4/AM5

